

# User Manual

# **TITANIUM** COMPACT SATELLITE HEADEND Ref. 8700 - 8701 - 8703





## Contents

1.	Introduc	tion
	1.1.	Product description2
	1.2.	Typical installation
	1.3.	Package contents
	1.4.	Product dimensions
	1.5.	Mounting
2.	Configu	ring the Titanium using the web interface
	MININ	AL SYSTEM REQUIREMENTS
	LOGG	ING IN TO THE DEVICE
	CONN	ECTING THE MODULE(S) TO A NETWORK
	DEVIC	CE CONFIGURATION
	1	. Login
	2	. Overview
	3	. Input
	4	. Output
	5	. CAM
3.	Technica	al Specifications
4.	Safety In	structions
5.	Conditio	ns of warranty

No part of this manual may be copied, reproduced, transmitted, transcribed or translated into any language without permission.

Unitron reserves the right to change the specifications of the hardware and software described in these manuals at any time.

Unitron cannot be held liable for any damages resulting from the use of this product. Specifications are subject to change without notice. 02/19

© Unitron - Frankrijklaan 27 - B-8970 Poperinge - Belgium T +32 57 33 33 63 F +32 57 33 45 24 email sales@unitrongroup.com www.unitrongroup.com



# **1. INTRODUCTION**

## 1.1. Product description

The Titanium is a compact satellite headend with 4 (Ref. 8700) or 8 (Ref. 8701, 8703) tuners. It is a transmodulator with 4 output MUXs (DVB-T/DVB-C) or 8 output MUXs (Ref. 8703). The standalone module with built-in power supply allows for very fast installation. The Titanium has 2 CI slots for CAM cards (Ref. 8703 has 4 CI slots).

#### ATTENTION! The Titanium should be wall-mounted.

For ventilation purposes, leave a minimum of 15 cm around all sides of the module.



## 1.2. Typical installation

The Titanium can be used to provide high quality satellite television in a wide range of projects, both in the hospitality as in the residential market. Typical buildings or infrastructures where the Titanium can be used include, but are not limited to:

- Hotels, hostels, bed and breakfasts, holiday parks
- Hospitals, rest homes, prisons
- Large and small multi-dwelling units with an international public, settlements
- Maritime infrastructure such as boats, yachts, barges



## 1.3. Package contents

- 1 x Titanium (ref. 8700 or 8701 or 8703)
- 1 x 75 Ohm terminators
- 1 x Mains cable (1,80 m)

## 1.4. Product dimensions





## 1.5. Mounting



Proper installation is critical to system performance. It is particularly important to install the Titanium correctly in order to receive and distribute optimal signal quality.

- Mount the Titanium to a wall in a well ventilated and cool room. For ventilation purposes, leave a minimum of 15 cm around all sides of the module.
- Plug the 4 satellite cables in the SAT 1-4 ports.
- If the Titanium should receive RF signal from another Titanium or an external source, connect a coaxial cable to the RF IN port. If not applicable, insert a 75 Ohm terminator in the RF IN port.
- Connect the coaxial TV network to the RF out port.
- If the Titanium is configured to read CAM cards, insert 1, 2, 3 or 4\* CAM cards\*\* and smart cards\* in the slots on the backside of the Titanium.
   (\* depending on Titanium type)
   (\*\*Not included with the Titanium).
- Power the Titanium with the mains cable. Once it is powered, a RED POWER LED will start blinking. When the LED stops blinking and turns BLUE, the module is completely booted and ready for configuration. This will take approximately 4 minutes.
- For configuration of the module, the web interface must be accessed. Therefore, plug an Ethernet cable in the control port, and the other end in a computer.
- More information about configuration of the Titanium module can be found in the next section



## 2. CONFIGURING THE TITANIUM USING THE WEB **INTERFACE**

### MINIMAL SYSTEM REQUIREMENTS

The WebGUI is supported by the following web browsers:

- **Google Chrome**
- Mozilla Firefox
- Internet Explorer
- Safari

Make sure to use the most recent version of the browser. When using a different browser, we cannot guarantee a correct functioning of the interface.

## LOGGING IN TO THE DEVICE

Plug one end of an Ethernet cable in the control port and the other end in a computer. Once the Titanium is powered and fully booted, the module is reachable and ready to be configured.

#### For a more reliable WebGUI connection, we advise to use fixed IP or DCHP. Therefore, carefully follow the steps below:

- Set the computer to obtain an automatic IP address as explained in the following procedure (for Microsoft Windows10<sup>®</sup>)
  - Navigate to the *Control Panel* (Start  $\rightarrow$  Control Panel).
  - Enter the Network and Sharing Center and go to the Adapter Settings
     Right-click on the Local Area Connection and choose Properties.

(	<b>N</b>	Bluetooth Network Connection Not connected Bluetooth Device (Personal Area	Local Area Connecti Unidentified networ Realtek PCIe GBE Fa	i <b>on</b> rk mily	Controller Wireles:	Network Connection group.intra AR9285 802.11b/g/n WiFi	<b>S</b>	Wireless Network Connection 2 Not connected Microsoft Virtual WiFi Miniport A	
				۲	Disable				
					<b>Status</b> Diagnose				
				۲	Bridge Connections				
L					Create Shortcut				
				0	Delete				
L				۲	Rename				
				•	Properties				
1									

- Double click Internet Protocol Version 4 (TCP/IPv4) to enter the IP 0 settings of your adapter.
- Make sure the 'Obtain an IP address automatically' checkbox is 0 selected.



- Open your web browser, and go to: http://start
  - The web interface of the Titanium will now open.
    - o Go to Management Port
    - Tick off Obtain IP address from DHCP
    - o Choose an IP Address, for instance: 192.168.55.55
    - Press Apply

#### 🧿 johansson

Device					
Overview	Management	Port			
Information	Hostname	start			
Preferences		Juit			
Management Port 🛛 🗸	IP Settings	Obtain IP address	s from DHCP		
Firmware Upgrade		IP Address:	192.168.55.55		
Configuration		Subnet Mask:	255.255.0.0		
Device Settings		Default Gateway:	0.0.0.0		
Reset Device					
Logout	Apply	]			
Input		*			

- Go back to Local Area Connection Properties, select Internet Protocol Version 4 (TCP/IPv4) to enter the IP settings of your adapter
  - Tick Use the following IP address
  - Fill in the IP address you chose in the Titanium Management Port, but make sure that the last group of digits is different, for instance: 192.168.55.10

Internet Protocol Version 4 (TCP/IPv4)	Properties ×
General	
You can get IP settings assigned auton this capability. Otherwise, you need to for the appropriate IP settings.	natically if your network supports ask your network administrator
Obtain an IP address automatical	у
• Use the following IP address:	
IP address:	192.168.55.10
Subnet mask:	255.255.0.0
Default gateway:	
Obtain DNS server address auton	natically
• Use the following DNS server add	resses:
Preferred DNS server:	
Alternative DNS server:	
Validate settings upon exit	Advanced
	OK Cancel

• Open your webbrowser and go to http://start

Now a stable connection is guaranteed



## Connecting the module(s) to a network with DHCP

To connect the module(s) to a network, go to the Management Port in the web interface.

Device			
Overview	Management	Port	
Information	Hostname	8701	
Preferences			
Management Port	IP Settings	Obtain IP addres	s from DHCP
Firmware Upgrade		IP Address:	169.254.55.55
Configuration		Subnet Mask:	255.255.0.0
Device Settings		Default Gateway:	0.0.0.0
Decel Decise			
Reset Device			

*Tick Obtain IP address from DHCP* and give each Titanium a unique hostname (for instance: http://8701). Click apply to confirm. Now the module can be accessed via <a href="http://hostname">http://8701</a>) or check your DHCP server for IP address.

## **DEVICE CONFIGURATION**

It is of utmost importance that your device is configured in a right way in order to make the Titanium installation successful. To do so, follow the below mentioned steps carefully.

- 1. Login
  - After the web interface opens (see previous step), the home page with an overview of active services appears. On this screen, you see information about the output MUXs, the CAM status and the chosen TV services.
  - In the top right corner, you will see the device status. If the status "LED" is green, there are no alarms. When you move your cursor over the status "LED", the alarm status will appear.
  - By clicking on login, you can log in to the module. Use the password "admin".
  - ! change the password as soon as you log in to the module via Management Port"!
  - After logging in, the Overview window will appear again. The menu structure of the web interface can be found in the left column.



0 johansson							8701 - Titaniun
Login	DVB-C 1	30 % DVB-C	2 💼	40 %	DVB-C 3	41 %	
	SID State Name	LCN SID	State Name	LCN	SID State Nar	ne LCN	
	21025 🔒 een HD	1 401	🔒 TF1	5	4904 🔒 TA3	HD 9	
	21029 🔒 NPO1 HD	3 403	🔒 м6	6	4915 🔒 213	HD 10	
	21030 🔒 Canvas H	D 2 21040	) 🔒 NPO3 HD	4	5201 🔒 Ock	0 TV 7	
					3210		
	DVB-C 4	83	5 %				
	SID State Name	LCN					
	11170 🔒 ZDFinfo H	D 13					
	5001 🔒 BBC Worl	d News Europe HD 12					
	5031 🔒 Al Jazeera	English HD 14					

#### 2. Overview

The following actions are critical for optimal system performance:

- Information:
  - The folowing information can be found here: Device Type, Device Name, Device ID, Serial Number, Firmware Version, Hardware Version, Device Features and Device Temperature
- Preferences:
  - Choose dBM or dBµV as level unit. Click APPLY to confirm
- Management port:
  - Define the hostname and IP settings of your management port: Here you can configure the hostname of the module. This name can be used to access the module by simply typing it into your browser as the address and surf to it. This is more convenient than using the IP address.
  - Change your password to secure your module for unauthorized users.
  - Dynamic DNS: configuration for remote access to register a fixed IP address
- Firmware Upgrade:
  - Click on the Browse button, and open the upgrade file (.upg). Click
     Upgrade to send the file to the device, this will install the new firmware on the device.
- Configuration
  - Choose the configuration of your Titanium: DVB-T or DVB-C. Press *APPLY* to confirm
- Device Settings:
  - Go to this tab if you want to import a settings file from another module (click on *choose file* and select the .exp file on your computer), or export a settings file (so you can later upload it to another module).
  - $\circ$   $\;$  This tab can also be used to store and restore the device settings
- Reset device:
  - If there is an issue, go to the Reset Device tab to reboot your Titanium.
     Via this tab you can also reset certain settings or restore the default



configurations of your Titanium. All settings can be reset to default by means of a factory reset.

- The Titanium can also be manually reset. This can be done by inserting a pin (e.g. a paperclip) in the small opening in the front plate of the Titanium, between the power and alarm LEDs.
  - By pressing this button less than 2 seconds (LED above control port will turn RED), the device will reboot
  - By pressing this button longer than 5 seconds (LED above control port will blink GREEN), the device will reboot, the IP settings will be reset and the password will be reset to the default password "admin".
- Logout:
  - When you are finished configuring the Titanium, click logout to secure the web interface for unauthorized users.

0 johansson		
Device		
Overview ┥	DVB-C 1 31 % DVB-C 2 33 % DVB-C 3	<b>3</b> 6
Information	SID State Name LCN SID State Name LCN SID State Name	LCN
Preferences		0
Management Port		10
Firmware Upgrade	21030 A Canvas HD 2 21040 A NPO3 HD 4 5201 A Ocko TV	7
Configuration	5210 🔒 TV Lux HD	8
Device Settings		
Reset Device	DVB-C 4 76 %	
Logout	S/D State Name LCN	
nput	11170 🔒 ZDFinfo HD 13	
LNB	5001 🔒 BBC World News Europe HD 12	
Tuner	5031 🔒 Al Jazeera English HD 14	
- and	8003 🔒 CT 24 HD 11	
Dutput		
Mux		
Network	CAM 1	
CAM		



0

#### 3. Input

#### 3.1 Define the LNB settings (INPUT > LNB)

- Label: custom label for each input (e.g. VLow, or ASTRA 19.2VLow, ...)
- Voltage: The LNB voltage to select the polarization
  - 13V: Vertical polarization
  - 18V: Horizontal polarization
- **Extended Voltage**: Add 1V to the LNB voltage to compensate the cable losses for long coaxial cables.
- Tone: LNB tone to select low/high band
  - ON: high band
  - OFF: low band
- **DiSEqC**<sup>®</sup>: control of a DiSEqC<sup>®</sup> switch (A/B/C/D)
  - Band: Satellite band
    - Ku-band
      - C-band
- Enable: do not forget to enable the LNB input, this is disabled by default)
- Press *APPLY* to confirm the parameters.

0 johansson				8701	- Titanium
Device	LNB Input 1	LNB Input 2	LNB Input 3	LNB input 4	
Overview Information Preferences Management Port Firmware Upgrade Configuration Device Settings Reset Device Logout Input Iuts Vuer Output Mux Network CAM	LHB Input 1 Label Viow ES Voltage 13V  Extended 14V Tone OFF DISEqC A Band Ku Enable V Apply	LNB Input 2 Label Viow A19 Votage 13V • Extended +1V Tone OFF • DISEqC A • Band Ku • Enable • Apply	LNB Input 3	LIB Input 4 Label Hhigh A23 Voltage 18V  Extended 1+1V Tone 22kHz DiSEqC A Band Ku Enable V Apply	



#### 3.2 Define the settings for each of the tuners (INPUT > TUNER)

- Input Selection: this refers to the LNB inputs; make sure the transponder frequencies you choose correspond to the right polarity of the LNB inputs
- **Frequency (Mhz):** choose the frequency of the transponder you want to receive
- **Baud Rate (kBd):** choose the baud rate of the transponder signal you want to receive
- Modulation: choose between DVB-S and DVB-S2
- **Enable:** click the tick box to enable the tuner (this is disabled by default)
- Check the lock status, signal level, signal quality and signal to Noise to see if the tuner locks on the selected transponder
- Press *APPLY* to confirm the parameters.
- The module will now set the tuner to this frequency. Wait until the correct parameters are loaded. When the tuner is able to lock on the frequency, the services list from this transponder will be shown.
- Services list: after a tuner is locked, the services will appear. A RED lock indicates that the service is scrambled, a GREEN lock indicates that the service is clear
- **Network parameters:** this is an overview of the following information: Name, ONID, TSID, NID and version

	Tuner 1	Tuner 2	Tuner 3	Tuner 4	Tuner 5	Tuner 6	Tuner 7	Tuner 8	
	Tuner Set	ungs						Network	Ра
nt Port	Lock Stat	us 😑						Name	
Jpgrade	Bitrate	-			59.18 Mbps			ONID	
tion	Level	_			-41 dBm			TSID	
tings	Quality				10"			NID	
CP.	SINK				13 08			version	
	Input Sel	ection	Hhigh A23						
	Erequery	w (ML/2)	12187						
	Prequence	y (MP12)	12107						
	Baud Rai	e (KBO)	29900						
•	Modulatio	n	DVB-S2	•					
	Enable		V						
	Apply	·							
	Services	LIST							
	SID	Type State	Name						
		<u>ن</u>	177						
	21012		AI5						
	21020		AAD HD						
	21023								
	21025		Canuae HD						
	21030		Verenies/Dien						
	21035		NEO2 LID	eyvo no					
	21040		EOV Sporte 21	ID int					
	21045		24k/itoban						
	21055		EUROPROPT	2.05					
	21000		Cortoon Note						
	21001	L 🛑	Californi Metw	21K	1				
	21062	ΔĀ	TEST 11-2						



#### 4. Output

#### 4.1 Set all the Mux (OUTPUT > MUX)

- Frequency(kHz): Here you can select the frequency you want to transmit on. For DVB-T: 47000 to 862000, for DVB-C: 47000 to 1002000
- **Bandwidth (DVB-T):** Choose the desired bandwidth.
- **Baud Rate (DVB-C) (MBd):** choose the baud rate of the transponder signal you want to output
- **Constellation:** Choose the type of constellation you want to use. (64QAM, 16QAM, QPSK)
- Level(dBm): define the level of RF (between -25 to -40)
- **Enable:** click the tick box to enable the tuner (this is disabled by default)
- Press APPLY to confirm the Modulation Settings.

#### Transport Stream Settings:

• TSID: choose a identifier for the Transport Stream (value between 1 and 65535). Press *APPLY* to confirm the Transport Stream Settings.

Status:

 The bitrate bar shows the current bitrate of the selected multiplex. Depending on the model, the Titanium disposes of 4 multiplexes. The maximum bitrate per MUX is 30 Mbps (DVB-T) or 50 Mbps (DVB-C). It is however advisable to keep a buffer of 4 Mbps, to prevent possible overflow (bitrate of services can fluctuate in time). Select another multiplex by clicking on the tabs on top of the page.

#### Service Settings:

- Tuner: choose the input stream you set in INPUT
- **Name:** choose the service
- Cl: choose the routing of the service: FTA (Free-to-Air) CAM 1 CAM 2
- Priority: provides the possibility to prioritize some services (e.g. Primetime services) to guarantee better quality on TV in case of sporadic bandwidth overflow due to throughput limitation of the multiplex. It is advised not to exceed 30% of total number of services to be prioritized for each multiplex.
- New SID: Change the Service Identifier to remap the SID
- LCN: Give a Logical Channel Number to order the number of channels on the end-devices
- $\circ~$  Individual PID filtering: click the \/ to drop down the menu... here individual PIDs can be blocked per service
- Click the + sign to add the service to the list
- Define this for each <u>service</u> in the list.
- After a service is changed, it can be saved (save icon) or deleted (bin ico) Each service can be saved or deleted.
- Press UPDATE to confirm the parameters.

#### **PID Settings:**

• **Block others**: Tick this box and press *APPLY* to block all irrelevant program information data. Only the essential PID will be passed through: video, audio, CAS,...



870	00 -	8701	8703	TIT	ANII	JM
<b>0</b>			0105		/ \ I \ I \	

johansson		8701 - Titanium 8   👄
ce erview	Mux 1 Mux 2 Mux 3 Mux 4	
ormation	Modulation Settings	Service Settings
eferences		
magement Port	Prequency(KHZ) 414000	Tuner Name CI Priority New Sid LCN
mare opgrade	Baud Rate (JIRd) 6 900	
vice Settings	Constellation 256-QAM	
set Device	Level (dBm) -25	iuner SiD Name CI Prionty New SID LCN Enable
gout	Enable V	1 21025 een HD 🔒 CAM1 🔤 21025 1 🔽 🗸 🖓
		1 21029 NPO1 HD 🔒 CAM1 📰 21029 3 📝 🗸 🕞 🚺
t	Apply	1 21030 Canvas HD 🔒 CAM1 📰 21030 2 📝 🗸 🔚 🚺
8		
ier		
ut	Transport Stream Settings	PID Settings
ux ·		Block Others
twork		
l -	Apply	Apply
м		
	Status	
	Bitrate: 15.82/51.29 Mb	R

#### 4.2 Define the output network (OUTPUT > NETWORK)

- ONID: The Original\_Network\_ID (ONID) is defined as the "unique identifier of a network", check the spreadsheets on <u>http://www.dvbservices.com</u> to find your correct ONID
- **NID:** Choose your Network ID
- **Network Name:** Set your network name
- **Version:** set the version of the network (value between 0 and 31)
- Private Data Specifier: choose between EACEM ITC NORDIG
- Press *APPLY* to confirm the parameters.

🖸 johansson						
Device						
Overview	Network					
Information	ONID	1000				
Preferences	NID	1000				
Management Port	Network Name	NoName				
Firmware Upgrade	Version	1				
Configuration	Private Data Specifier	EACEM				
Device Settings						
Reset Device	Apply					
Logout						
Input						
LNB						
Tuner						
Output						
Mux						
Network 🛛						
CAM						
CAM						



#### 5. CAM

- 5.1 Set the CAM configurations for the Titanium (CAM > CAM 1-2-3-4)
  CAM settings
  - **Type:** Defines type of CAM module
    - Select low-speed (default) for legacy CAM module that can run up to 50 MBps
    - Select high-speed for second generation CAM module that can run up to 100 MBps
  - **Watchdog:** The watchdog monitors the scrambling status of all services going through the CAM. In case one or more services are no longer descrambled, the watchdog will proceed to the reset of the CAM module to try to restore the descrambling of the service(s). Important: Activate this feature only once all services are properly descrambled by the CAM module.
  - **Enable:** Click *ENABLE* to activate the CAM (default). Press *APPLY* to confirm the parameters.
  - Reference Transponder
    - Reference Transponder: It is necessary to enable and select a reference transponder in the CAM menu (for each CAM individually). The CAM module needs authorization to descramble services. Select the reference transponder with authorization information for each CAM individually.
       Press APPLY to confirm the parameters.
  - CAM Menu: the CAM menu will appear here when inserted. Click the tabs for more info

0 johansson	
Device	CAM 1 CAM 2
Overview	
Information	CAM Settings
Preferences	
Management Port	Type: LOW-SPEED
Firmware Upgrade	Watchdog:
Configuration	Enable:
Device Settings	Apply
Reset Device	Арріу
Logout	
Input	Pafaransa Transponder
LNB	
Tuner	Enable V Reference Stream 1 V
Output	
Mux	Apply
Network	
САМ	
CAM ┥	CAM Menu
	Aston CAM Smart card number 571.800.337
	# 1 : Subscription information
	# 2 . Jettings # 3 : Information
	Menu



# **3. TECHNICAL SPECIFICATIONS**

Input: QPSK/8PSK (DVB-S/S2)		
Inputs	-	4 satellite bands 1 x RF in
Tuners	-	4 tuners (4 transponders) (Ref. 8700) 8 tuners (8 transponders) (Ref. 8701) 8 tuners (8 transponders) (Ref. 8703)
Frequency range	MHz	950-2150
Level	dBm	-55 to -25
Bandwidth	MHz	36
Modulation	-	DVB-S2: QPSK, 8PSK / DVB-S: QPSK
DC remote power at RF input	-	13 V/18 V/22 kHz
Integrated multiswitch	-	Yes, allows flexible routing of satellite programs to multiplexes (QAM or QOFDM)
Configuration	-	Built-in webserver accessible via management port
Encoded programs	-	From all 4 or 8 tuners. Can be routed through 1, 2, 3 or 4 CAMs and can be decoded using multi-service CAMs
Max current per input to feed LNB	mA	350 per input
Output: RF		
Outputs	-	1 with 4 MUXs (DVB-T or DVB-C) (Ref. 8700-8701) 1 with 8 MUXs (DVB-T or DVB-C) (Ref. 8703)
DVB-T output	Mbps	Up to 31.7 / MUX
DVB-C output	Mbps	Up to 51.3 / MUX
Output MER	dB	≥ 43
General		
Power consumption	W	22 (excl. external LNBs)
CI slots	-	2 (Ref. 8700 - 8701) 4 (Ref. 8703)
Dimensions	cm	34.5 x 7 x 18.2
Operating temperature	°C	0 to +50



## 4. SAFETY INSTRUCTIONS



Read these instructions carefully before connecting the unit

#### A To avoid any risk of overheating:

- Install the unit in a well aery location and keep a minimum distance of 15 cm around the apparatus for sufficient ventilation
- Do not place any items such as newspapers, table-cloths, curtains,... on the unit that might cover the ventilation holes.
- Do not place any naked flame sources, such as lighted candles, on the apparatus
- Do not install the product in a dusty place
- Use the apparatus only in moderate climates (not in tropical climates)
- Respect the minimum and maximum temperature specifications

#### A To avoid any risk of electrical shocks:

- Connect apparatus only to socket with protective earth connection.
- The mains plug shall remain readily operable
- Pull out power plug to make the different connections of cables
- To avoid electrical shock, do not open the housing of adapter.



#### Maintenance

- △ Only use a dry soft cloth to clean the cabinet.
- 🛆 Do not use solvent
- A For repairing and servicing refer to qualified personnel.



#### Dispose according to your local authority's recycling processes



## **5. CONDITIONS OF WARRANTY**

Unitron N.V. warrants the product as being free from defects in material and workmanship for a period of 24 months starting from the date of production indicated on it. See note below.

If during this period of warranty, the product proves defective, under normal use, due to defective materials or workmanship, Unitron N.V, at its sole option, will repair or replace the product. Return the product to your local dealer for reparation

# THE WARRANTY IS APPLIED ONLY FOR DEFECTS IN MATERIAL AND WORKMANSHIP AND DOES NOT COVER DAMAGE RESULTING FROM:

- Misuse or use of the product out of its specifications.
- Installation or use in a manner inconsistent with the technical or safety standards in force in the country where the product is used
- Use of non-suitable accessories (power supply, adapters...).
- Installation in a defect system.
- External cause beyond the control of Unitron N.V. such as drop, accidents, lightning, water, fire, improper ventilation...

#### THE WARRANTY IS NOT APPLIED IF:

- Production date or serial number on the product is illegible, altered, deleted or removed.
- The product has been opened or repaired by a non-authorized person.

#### NOTE

Date of production can be found in the product's serial number code. The format will either be "YEAR W WEEK" (e.g., 2018W01 = year 2018 week 1) or "YYWW" (e.g., 1447 = year 2014 week 47).



www.unitrongroup.com

UNITRON NV Frankrijklaan 27 B-8970 Poperinge Belgium T +32 57 33 33 63 F +32 57 33 45 24 sales@unitrongroup.com www.unitrongroup.com



Elektro HERINK s.r.o. Wenzigova 79/8 301 00 Plzeň

tel.: +420 377 222 255

obchod@elektroherink.cz

www.elektroherink.cz

