



User Manual

dCSS/dSCR Multiswitch 9733 – 9734



CONTENTS

1. INSTALLATION OF THE HARDWARE	3
1.1. Quattro LNB.....	3
1.2. Wideband LNB's.....	4
2. CONFIGURATION OF THE MODULE	5
2.1. Input : Quattro versus Wideband.....	5
2.2. Output : Legacy versus dSCR.....	7
EN50494/SCR standard (DiSEqC 1.0).....	7
EN50607/dCSS/dSCR standard (DiSEqC 2.0)	7
CONCURRENT EN50494/EN50607 standards	7
SKY UK standard	7
2.3. DC Power.....	8
3. TECHNICAL SPECIFICATIONS	9
4. SAFETY INSTRUCTIONS	11
5. CONDITIONS OF WARRANTY.....	12

No part of this manual may be copied, reproduced, transmitted, transcribed or translated into any language without permission.

Unitron reserves the right to change the specifications of the hardware and software described in these manuals at any time.

Unitron cannot be held liable for any damages resulting from the use of this product. Specifications are subject to change without notice. 11/16

© Unitron - Frankrijklaan 27 - B-8970 Poperinge - Belgium


T +32 57 33 33 63 F +32 57 33 45 24

email sales@johansson.be


www.johansson.be - www.unitrongroup.com

1. INSTALLATION OF THE HARDWARE

1.1. Quattro LNB

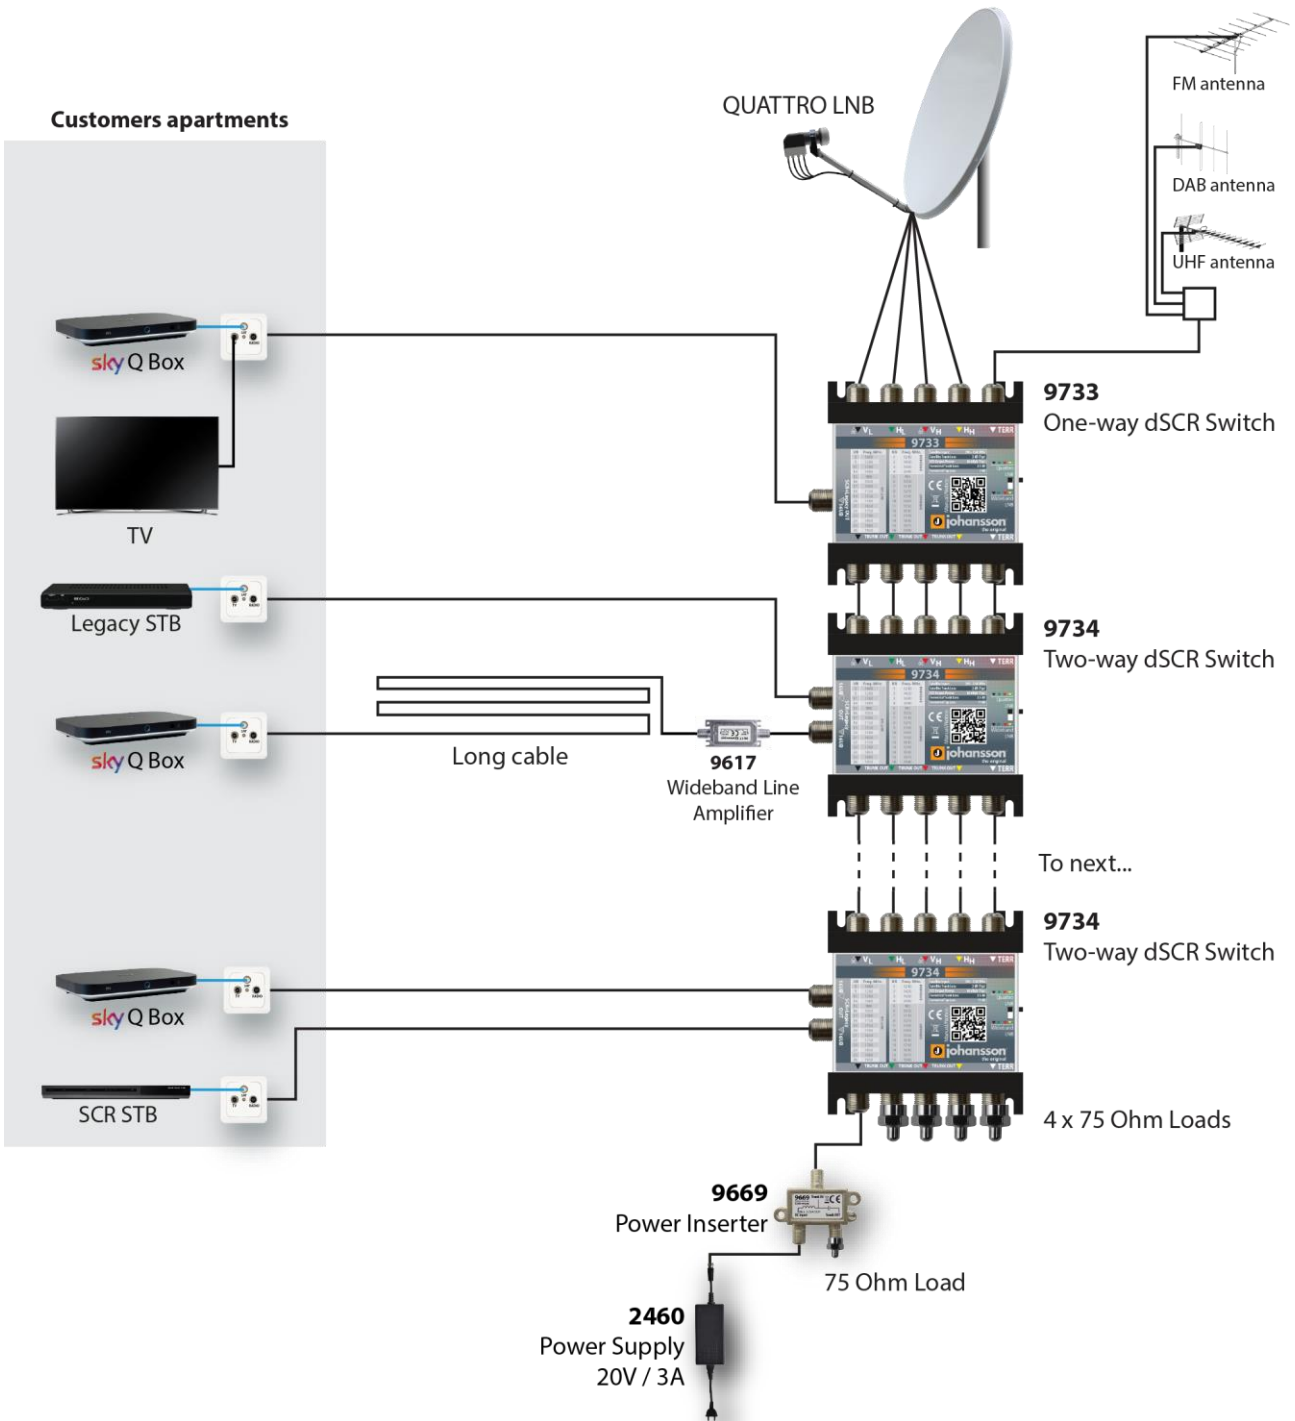

1.2. Wideband LNB's

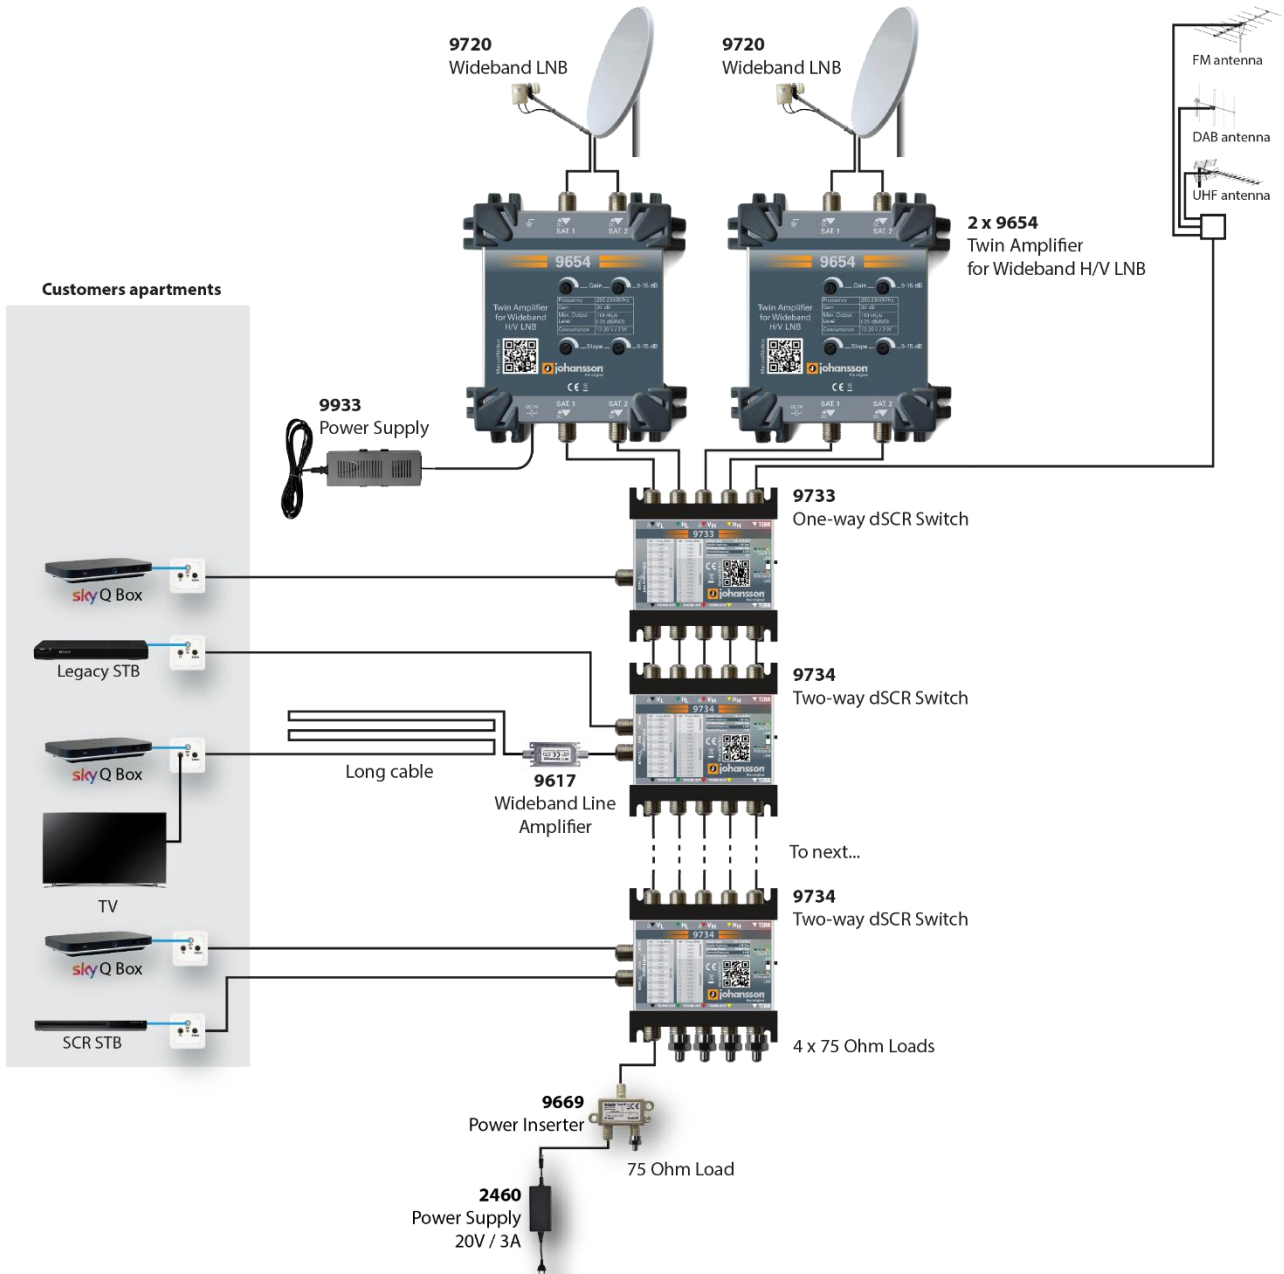

2. CONFIGURATION OF THE MODULE

The 9733 / 9734 are extremely versatile products, both on the input side as well as on the output side. Schematically the units support the following modes and applications:

		Inputs	
		Quattro	Wideband
Outputs	Legacy	Universal multiswitch	Wideband 2 quad convertor
	dSCR/SCR	dSCR multiswitch	Wideband dSCR multiswitch

2.1. Input : Quattro versus Wideband

The input connections of the product can be configured in "Quattro mode" and in "Wideband mode".

When using Quattro LNBS, the switch on the right side of **each** 9733 / 9734 should be set in the upper position (Quattro LNB). The 9733 / 9734 will then expect to receive on each of the 4 inputs a satellite signal from 950 to 2150MHz. See picture on page 3 for a typical setup.


In this mode, a quad LNB can also be used, but then an extra product will need to set the 4 polarities of the LNB to match the VL – HL – VH – HH inputs of the 9733 / 9734. This can be done by using the Johansson ref 9930.

When using wideband LNBS, the switch on **each** 9733 / 9734 should be set in the lower position (Wideband LNB). In this case, wideband satellite signals from 290 to 2340MHz should be used. See picture on page 4 for a typical setup.


In this mode, up to 2 wideband LNBS can be connected, allowing to receive the complete signals from 2 orbital positions. The left wideband inputs V-H are the DiSEqC "LNB A" position, the right V-H inputs are the DiSEqC "LNB B" position.

Note : when using the product in wideband mode, the product will automatically make the translation between the incoming frequency and the outgoing frequency. If for instance an STB tunes into the HH band, the product will convert the incoming horizontal section 1290-2340MHz into an output range of 1100-2150MHz.

The same is valid when using the product as a Wideband dSCR multiswitch. If the STB tunes into for instance VL 1000MHz, the multiswitch will take the incoming vertical transponder at 340MHz.

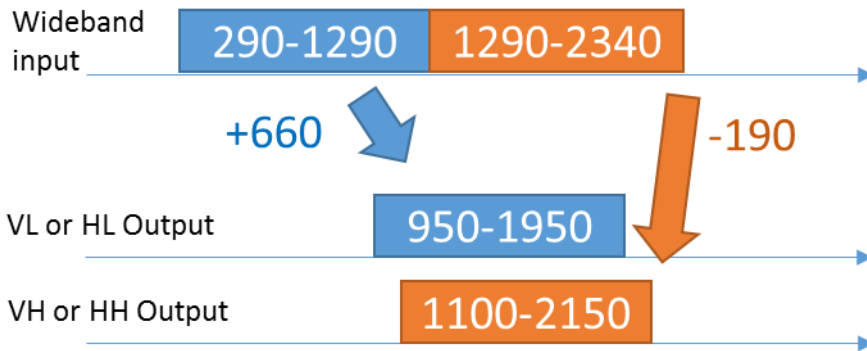

The diagram above shows the basic frequency relation between wideband satellite frequencies and the standard legacy satellite frequencies. Below is the relation between the STB tuned transponder and the wideband incoming transponder frequency.

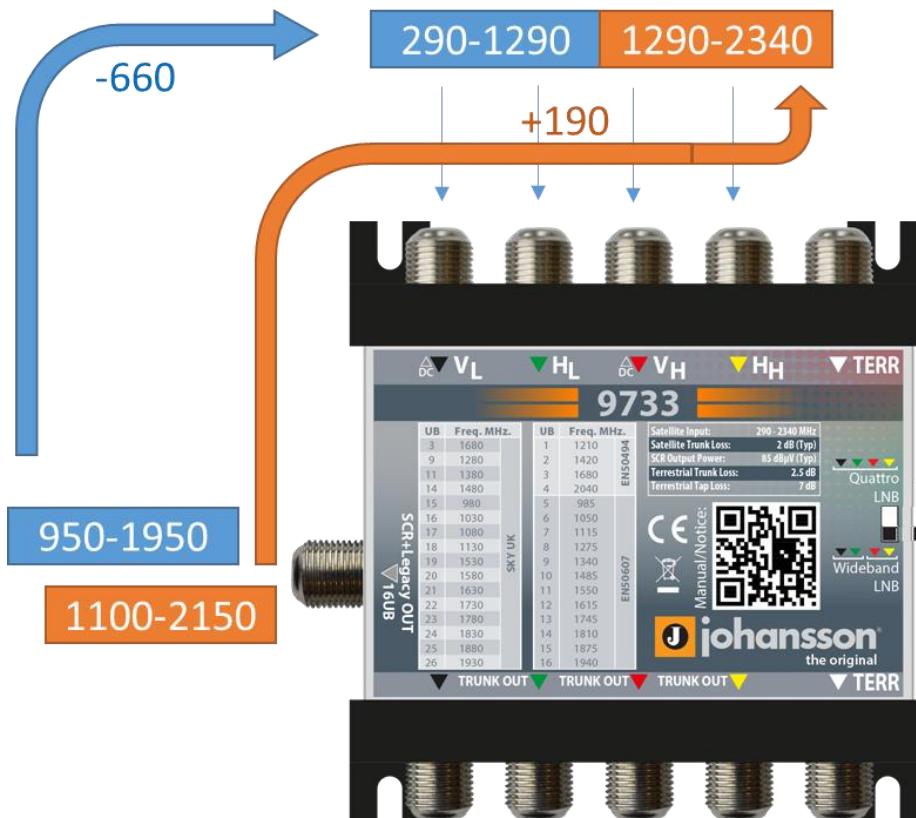

In both the Quattro and Wideband mode, the 9733 / 9734 will allow powering the LNBs on both vertical trunks lines (see chapter 2.3 "DC Power" for more details on how to power the units and the LNB).

2.2. Output : Legacy versus dSCR

Independent of the selected input mode, the outputs can support legacy and SCR/dSCR STBs.

At startup, the unit works in Legacy mode and can be used as a universal multiswitch or wideband2quad convertor, depending on the position of the switch.

Upon receiving the first dSCR command, the unit will automatically switch into dSCR mode in which it supports the following standards :

EN50494/SCR standard (DiSEqC 1.0)

STBs that only support EN50494 will only be able to use the first 4 userbands.

EN50607/dCSS/dSCR standard (DiSEqC 2.0)

STBs that support the newer EN50607 will be able to use the other 12 userbands (UB5 – UB16). This is typically for new multi-tuner STBs with 8 or 12 tuners, like SkyQ or other Home Media Gateways (HMG).

CONCURRENT EN50494/EN50607 standards

For upgrading existing SCR installations where the main STB is upgraded to Next Gen PVR (like SkyQ), the dSCR multiswitch can support both standards simultaneously. In this case a mix of STBs can be supported :

- The existing STBs will use UB1 through UB4
- The new main STB will use UB5 through UB16
- In this case DiSEqC 1.0 and DiSEqC 2.0 will be used over the same cable from LNB to the apartment

SKY UK standard

This is for Installations with the SKY Q-Box :

- SkyQ will have 16 userbands available
- Signalling DiSEqC 1.0 or 2.0 will be used.

For an overview, please see the table in chapter 3 : Technical Specifications.

To return back to legacy mode, that output has to be reset. This can be done by removing the DC from the STB output connector. In case of the 9734, the 2 outputs are independent, so resetting (= unpowering) 1 output does not affect the other output.


2.3. DC Power

Powering the units can be done in 2 ways :

1. **From STBs :** each STB has to power its connected unit. In this case, the LNB itself will not be powered from the 9733 / 9734 and has to be done from another power source.
2. **From the trunk lines :** all of the cascaded dSCR multiswitches can take DC power from the trunklines. Adding DC on trunks can be done by using a power inserter (Ref 9669) and a powersupply (Ref 2460) on 1 of the vertical trunk lines. See chapter 1 on hardware installation for a typical example. This setup will also power the LNB and the trunk amplifiers.

A powersupply (Ref 2460) is designed to power up to 6 of these dSCR multiswitches in cascade. When connecting more than 6 dSCR multiswitches, it is advised to add more powersupplies.

Block diagram of the DC paths inside the 9734 (the 9733 is similar with only 1 STB output) :

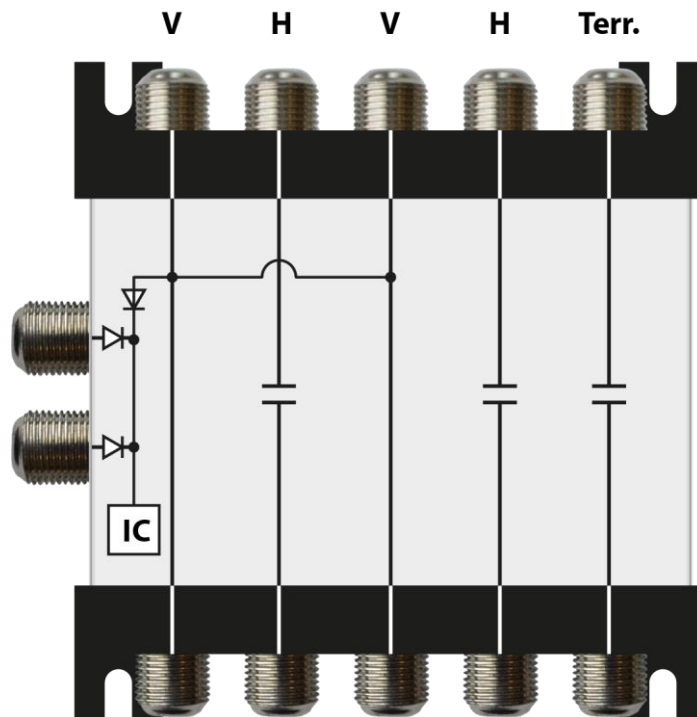

3. TECHNICAL SPECIFICATIONS

		9733	9734
Trunk inputs	-	4+1	
Trunk outputs	-	4+1	
Trunk Frequency (MHz)	-	5 – 862 / 290 – 2340	
STB Output Frequency (MHz)	-	5 – 862 / 950 – 2150	
Trunk loss	-	2.5 / 2 dB	
dCSS/dSCR outputs	-	1	2
dCSS/dSCR output connector	-	75 Ohm F type (Female)	
dCSS/dSCR UBs	-	16	16+16
dCSS/dSCR output level	-	85 dB μ V	
Return loss	-	>=8 dB (Typ 12 dB)	
Tap loss	-	Not applicable, AGC (automatic Gain control)	
Terrestrial/Cable loss	-	-7 dB	-11 dB
Band and polarity selection	-	Universal LNB voltage & Tone DiSEqC 1.0 (unidirectional) DiSEqC 2.0 (bidirectional) Standard EN 50494 (SCD) Standard EN 50607 (SCD 2) SKY UK standard	
Max DC current consumption	-	< 320mA @ 13 Volt	< 350mA @ 13 Volt
Power supply	-	From STB, power inserter or trunk (VL&VH)	
Power (2460+9669 available separately)	-	3A max, 20V	
Dimensions	-	92x90x40 mm	

UB index	UB center frequency (MHz)	UB default BW (MHz)	Protocol	Compatible STBs
1	1210	46	EN50494	SCR compatible STB and PVR
2	1420	46	EN50494	
3	1680	46	EN50494	
4	2040	46	EN50494	
5	985	46	EN50607	New multi-tuner STBs with up to 8 or 12 tuners
6	1050	46	EN50607	
7	1115	46	EN50607	
8	1275	46	EN50607	
9	1340	46	EN50607	
10	1485	46	EN50607	
11	1550	46	EN50607	
12	1615	46	EN50607	
13	1745	46	EN50607	
14	1810	46	EN50607	
15	1875	46	EN50607	
16	1940	46	EN50607	

UB index	UB center frequency (MHz)	UB default BW (MHz)	Protocol	Compatible STBs
3	1680	46	SKY UK	SkyQ or similar
9	1280	46	SKY UK	
11	1380	46	SKY UK	
14	1480	46	SKY UK	
15	980	46	SKY UK	
16	1030	46	SKY UK	
17	1080	46	SKY UK	
18	1130	46	SKY UK	
19	1530	46	SKY UK	
20	1580	46	SKY UK	
21	1630	46	SKY UK	
22	1730	46	SKY UK	
23	1780	46	SKY UK	
24	1830	46	SKY UK	
25	1880	46	SKY UK	
26	1930	46	SKY UK	

4. SAFETY INSTRUCTIONS



Read these instructions carefully before connecting the unit



To prevent fire, short circuit or shock hazard:

- Do not expose the unit to rain or moisture.
- Install the unit in a dry location without infiltration or condensation of water.
- Do not expose it to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- If any liquid should accidentally fall into the cabinet, disconnect the power plug.



To avoid any risk of overheating:

- Install the unit in a well aery location and keep a minimum distance of 15 cm around the apparatus for sufficient ventilation
- Do not place any items such as newspapers, table-cloths, curtains, on the unit that might cover the ventilation holes.
- Do not place any naked flame sources, such as lighted candles, on the apparatus
- Do not install the product in a dusty place
- Use the apparatus only in moderate climates (not in tropical climates)
- Respect the minimum and maximum temperature specifications



To avoid any risk of electrical shocks:

- Connect apparatus only to socket with protective earth connection.
- The mains plug shall remain readily operable
- Pull out power plug to make the different connections of cables
- To avoid electrical shock, do not open the housing of adapter.



Maintenance



Only use a dry soft cloth to clean the cabinet.



Do not use solvent



For repairing and servicing refer to qualified personnel.



Dispose according your local authority's recycling processes

5. CONDITIONS OF WARRANTY

Unitron N.V. warrants the product as being free from defects in material and workmanship for a period of 24 months starting from the date of production indicated on it. See note below.

If during this period of warranty the product proves defective, under normal use, due to defective materials or workmanship, Unitron N.V, at its sole option, will repair or replace the product. Return the product to your local dealer for reparation

THE WARRANTY IS APPLIED ONLY FOR DEFECTS IN MATERIAL AND WORKMANSHIP AND DOES NOT COVER DAMAGE RESULTING FROM:

- Misuse or use of the product out of its specifications.
- Installation or use in a manner inconsistent with the technical or safety standards in force in the country where the product is used
- Use of non-suitable accessories (power supply, adapters...).
- Installation in a defect system.
- External cause beyond the control of Unitron N.V. such as drop, accidents, lightning, water, fire, improper ventilation...

THE WARRANTY IS NOT APPLIED IF

- Production date or serial number on the product is illegible, altered, deleted or removed.
- The product has been opened or repaired by a non-authorized person.

NOTE

Date of production is YYWW format, example 1447 = year 2014 – week 47.
For the serial number barcodes, the date corresponds to the 4 first numbers



www.unitrongroup.com

UNITRON NV
Frankrijklaan 27
B-8970 Poperinge
Belgium

T +32 57 33 33 63
F +32 57 33 45 24

sales@johansson.be
www.johansson.be

HERINK
E L E K T R O

Elektro HERINK s.r.o.
Wenzigova 79/8
301 00 Plzeň

tel.: +420 377 222 255

obchod@elektroherink.cz

www.elektroherink.cz